

# Cable Adjustment Arm Kit

## Installation Instructions

Lo-Profile Cleat



1. Before positioning window into rough opening, install the Eye Brackets, Split Lock Washers and Eye Bracket Nuts on threaded rods extending from top of window. **H**

Note: The open eye must face the back of the window.

**G H**

2. Install Cable Adjustment Arms on cables with 1/4-inch Lock Washers and Cable Adjusting Nuts. Thread Nuts on studs until threads show. **I**


3. Place window into rough opening, using blocks and jacks at the bottom to hold and level window.

4. Select the mounting locations for the Lo-Profile Cleats and install with supplied Mounting Screws and Insert Bit. **G K**


5. Hook Cable Adjustment Arms on Eye Brackets and pull cables up and lace through Lo-Profile Cleats. **G L**

6. After cables are secure and with blocks and jacks still in place, adjust cable tension by turning the small Adjusting Nuts on Cable Adjustment Arms. **I**


**Note: Double-check that window is level and square before securing it to rough opening.**

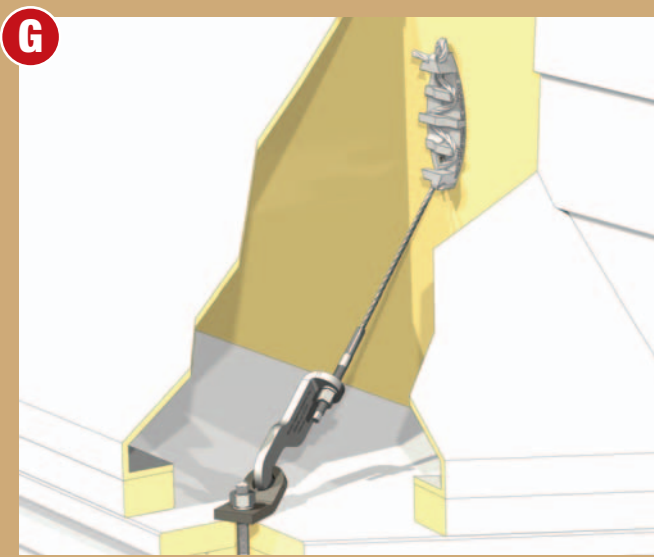


### H Eye Bracket Assembly

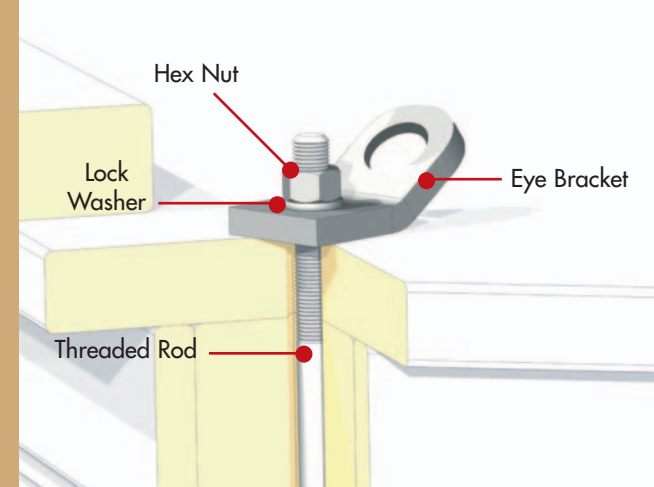


### I Cable Adjustment Arm Assembly

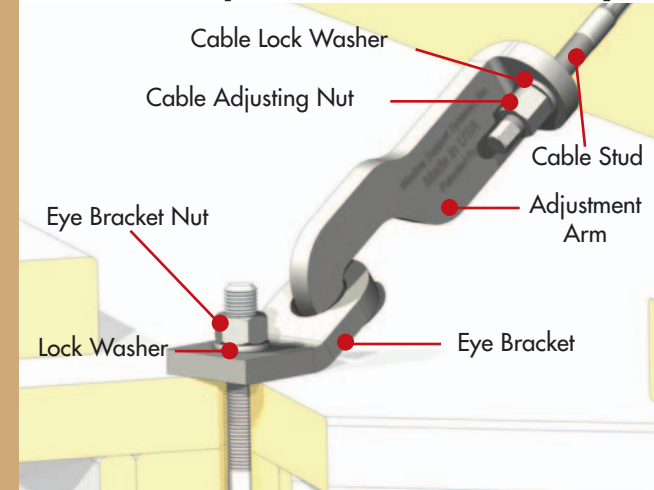



### J Cable Adjustment Arm Kit

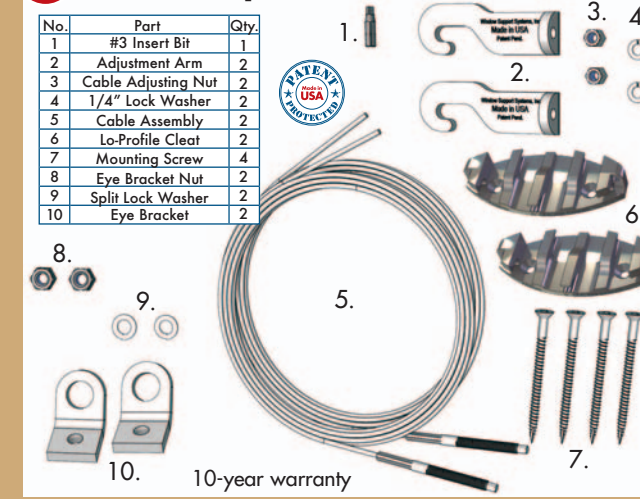


### K Mounting Locations

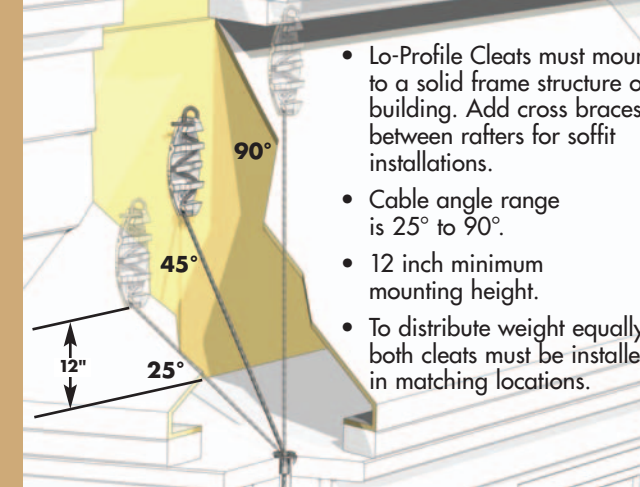

### L Lacing Instructions

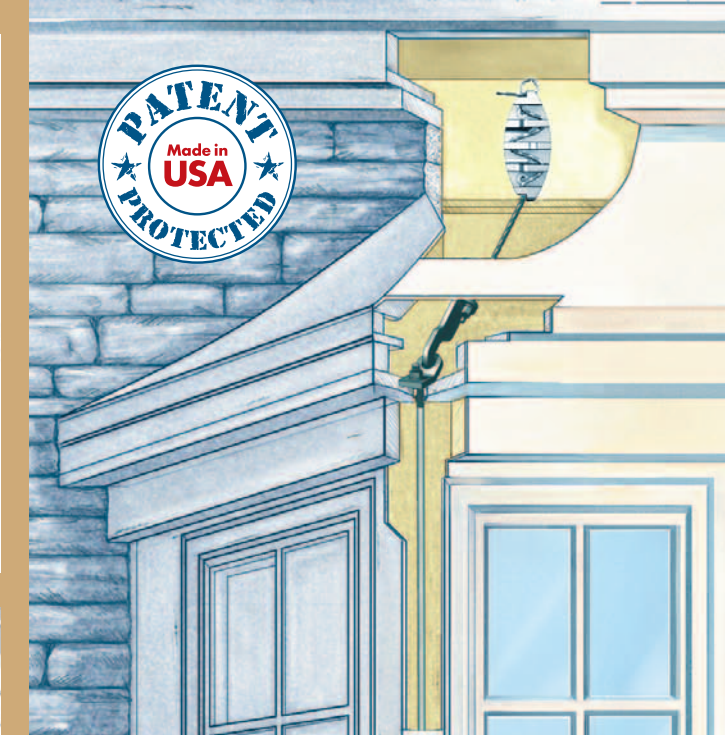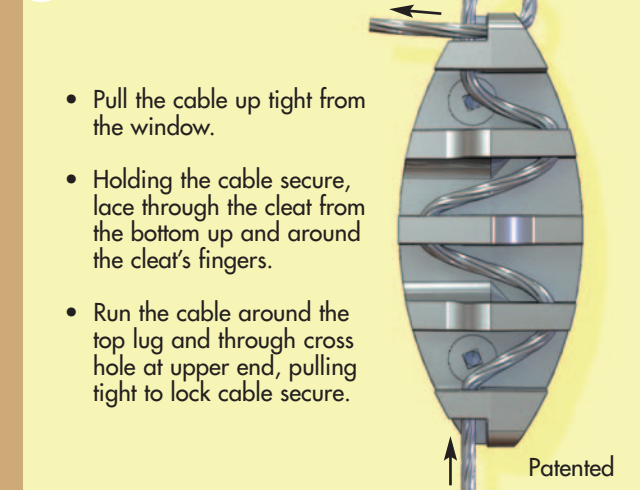

- Engineered for Excellence
- Easy Installation
- Designed to Last
- Patented Components
- Tested for Quality

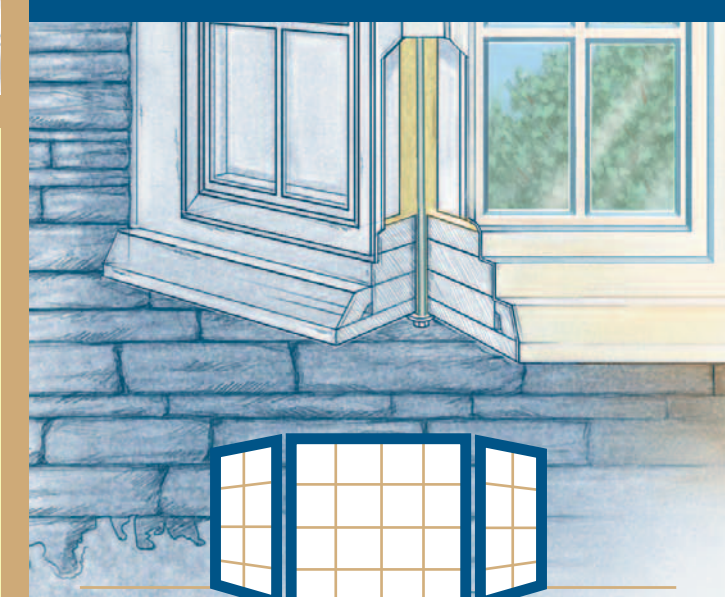

7805 Telegraph Road, Bloomington, MN 55438

local	952 828 9600	web	www.winss.com
t-free	888 527 9600	email	info@winss.com
fax	952 828 9700	© Window Support Systems, Inc.	